



VINTAGE OAK + FLORLOK DANCE FLOOR

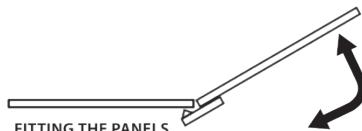

INSTRUCTIONS

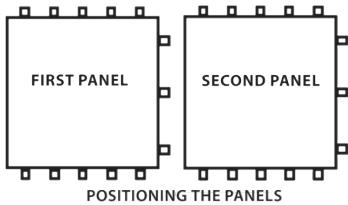

STEP 1

Row #1: To lay the floor, start at the top left corner. Position a full panel with 3 end lugs pointing to the right. The side without any end lugs faces left.

STEP 2

Place the second panel to the right of the first, facing in the same direction as the first, with the 3 end lugs pointing to the right.

STEP 3

Fit the panels together: Hold the second panel at an angle, as shown, and push it so the lugs slide underneath the panel already laid. When the lugs are fully under and both panels are completely touching along their edges, lower the panel to the floor. If the panels are not square or the edges do not touch, the panel will not lower. DO NOT FORCE the panel down, SIMPLY ADJUST it until it lowers into position.

STEP 4

Continue to lay the first row in the same manner with as many full panels as required for the size of the floor. (A completed row of 3 panels = 9' floor) Panels must be positioned flush along the entire length of the row to ensure edging will be straight. **Tip:** It may be helpful to have someone hold the panels of the first row while fitting the second row to prevent the panels from slipping on a smooth surface. Or, lay the first row and then fit the edging to hold the panels while the second row is added.



EVENT SOURCE
PANACHE EVENTS

consistently delivering™

EVENT SOURCE

EventSource.com

877.901.0000

PANACHE EVENTS

PanacheEvents.com

800.30.PARTY (72789)

AFTER HOURS

Call above toll free numbers and press Option 2. Please leave a message and we will respond shortly.

Vintage Oak

SKU 455-2005/2113 INCLUDES

Full Panels
Half Panels
Edging

Florlok

SKU 450-2002/2336 INCLUDES

Full Panels
Half Panels
Edging



NOTE

Never move the trolley without the removable top bar fitted.

Always store the flooring in a well ventilated area, never in a hot, dry environment.

Avoid excessive exposure to moisture.


VINTAGE OAK DANCE FLOOR




INSTRUCTIONS

STEP 5

Row #2: Begin with a half panel with the 3 end lugs pointing to the right. Follow with full panels as in Row #1. End the row with a half panel.

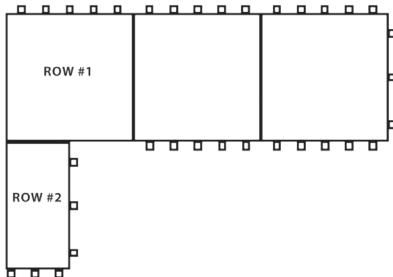

BEGIN ROW #2 WITH A HALF PANEL

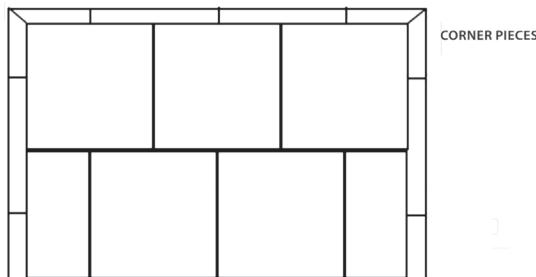

EDGING FOLLOWS A BRICKWORK PATTERN

CORNER PIECES



EDGING

After Row #2 is complete, start to lay the edging. The edging acts as a straight edge to ensure each row is square and flush as it is laid. Attach the edging by pushing the lugs underneath the panels at an angle and then lowering to the floor in the same manner as the panels. DO NOT FORCE the fit. Half length and full length edges are supplied so that the panel and edging joints never coincide, following an overlapping brickwork pattern. The angled pieces always position on the corners of the floor, as shown, never on a straight side.

Remaining Rows:

Use full panels for Row #3 and start and finish with half panels for Row #4. Continue alternating rows with full and half panels, fitting edging until full dimension of floor is laid.



EVENT SOURCE
PANACHE EVENTS

consistently delivering™

EVENT SOURCE

EventSource.com

877.901.0000

PANACHE EVENTS

PanacheEvents.com

800.30.PARTY (72789)

AFTER HOURS

Call above toll free numbers and press Option 2. Please leave a message and we will respond shortly.

SKU 455-2005/2113 INCLUDES

Full Panels

Half Panels

Edging



NOTE

Never move the trolley without the removable top bar fitted.

Always store the flooring in a well ventilated area, never in a hot, dry environment.

Avoid excessive exposure to moisture.